

www.dehoust.com

PE STORAGE TANKS AQF

Operation and installation manual



Installation and Operation Manual for Plastic Storage Tanks AQF

1. TRANSPORT AND STORAGE

When storing and transporting the PE storage tanks, care must be taken to ensure that the tanks are not damaged by placing them on sharp objects such as nails, steel chips, etc. Avoid pushing the tanks over rough floors. Dirty tanks can be cleaned with water. The tanks must not be subjected to improper use on the construction site.

2. SETUP AND INSTALLATION

Before installing and before filling, the containers should be checked for contamination inside and cleaned if necessary. The tanks are installed horizontally on smooth, stable ground. The container bottom stands completely on the surface. Ensure that the tanks are set up so that they cannot tip over and that there is sufficient distance from the wall. Building regulations must be observed.

2.1 BOTTOM CONNECTING PIPE AOF 570 - 1000

AQF containers are equipped with a S 56x4 outlet (AQF 570 and 690 two of those) for mounting lower connection (971765) or stop cock (971640) or only the adapter (72176). The battery set-up accessories kit means the storage volume can be enlarged as required.

2.2 STORAGE OF WATER

Plastic storage tanks AQF are made of high-quality polyethylene (HD-PE) and are properly suitable for drinking water and process water.

HD-PE is physiologically safe and complies with the guideline for domestic installations and the recommendation for drinking water installations.



3. OPERATION MANUAL

No impermissible stresses may be transferred to the tank wall by connected pipes. The containers are designed for products with a density of up to 1.15 kg per dm³. Filling the tank with alternative type liquid is to be avoided. The containers are designed for pressureless operation. Therefore make sure that the vessels are sufficiently ventilated during operation. Storage container type PE-AQF are designed for continuous temperatures of max. 35°C; peak temperatures of the stored product of 40°C are only admisable if the material cannot heat up considerably above 35°C. Certificates and ordinances regulations must be observed.

The safety of the tanks is only guaranteed if the conditions of this manual and the legal regulations are observed and the installation is carried out by a specialist company. This company confirms the proper installation on the acceptance certificate.

Possible accessories:

BATTERY SET-UP: 971765 AQF connecting pipe



EINZELAUFSTELLUNG:

72176 971640
Adaptor Stopcock
1 ½ inch with adaptor 1 ½"





More information at www.dehoust.com – enter the article number in the search box.

These installation and operations apply to storage containers:

DEHOUST

AQF 570	Article number	61206 and 61200
AQF 690	Article number	61216 and 61210
AQF 750	Article number	61176
AQF 1000	Article number	61196
AQF 1500	Article number	61261
AOF 2000	Article number	61265



Mehr Informationen im Internet: einfach die Artikelnummer im Suchfeld eingeben.



More information at www.dehoust.com – enter the article number in the search box.



Plus d'information sur www.dehoust.com ou entrez le numéro d'article dans le champ de recherche.

